




**Ocean Rodeo**

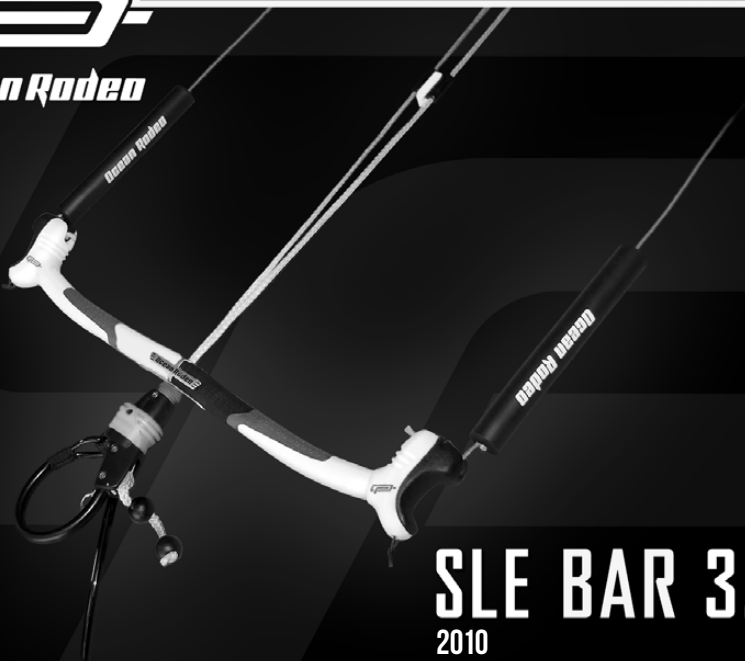

**SLE BAR 3.0**

2010

## **Take a lesson!**

**Before you launch any kite, it is imperative to take certified kiteboarding lessons.**

**For Information on lessons in your area go to [www.oceanrodeo.com](http://www.oceanrodeo.com).**


## **IMPORTANT NOTE**


Read this manual thoroughly before using your kite bar. This is not a kitesurfing instruction manual, nor does it eliminate the necessity for obtaining professional instruction in the sport of traction kiting. The

user is therefore advised to obtain such instruction as well as familiarizing him/herself with the information contained in this manual prior to using this bar. For information on lessons in your area visit [www.oceanrodeo.com](http://www.oceanrodeo.com).

## TABLE OF CONTENTS

Caution _____	6	Trim Loop reset after activation _____	16
Tuning the lines _____	7	Using a Lock in Tube _____	17
Back Line Length Adjustment _____	9	Trim line Adjustment _____	18
Front Line Length Adjustment _____	10	Adjustable tension bar stopper _____	19
Kite Leash Attachment _____	11	Adjust bar length _____	21
Kite Leash Attachment to Trim Line _____	12	Line storage bungees _____	22
Attaching the kite leash to your harness _____	13	Storing and Caring _____	23
Kite safety leash Release cuff tension _____	14	Warranty _____	23
Trim Loop Release Cuff Activation _____	15	The Crew is for You! _____	24

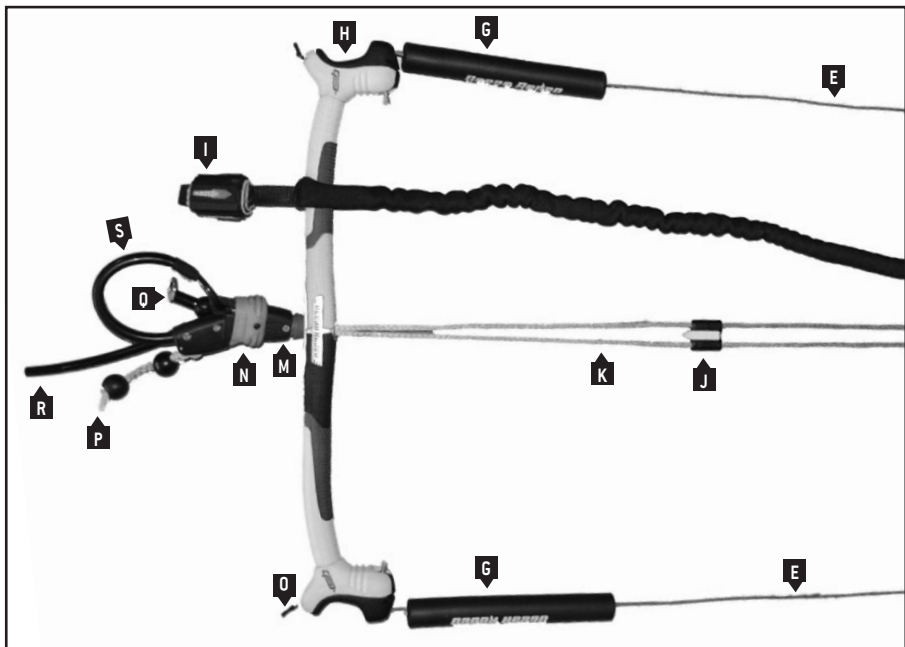


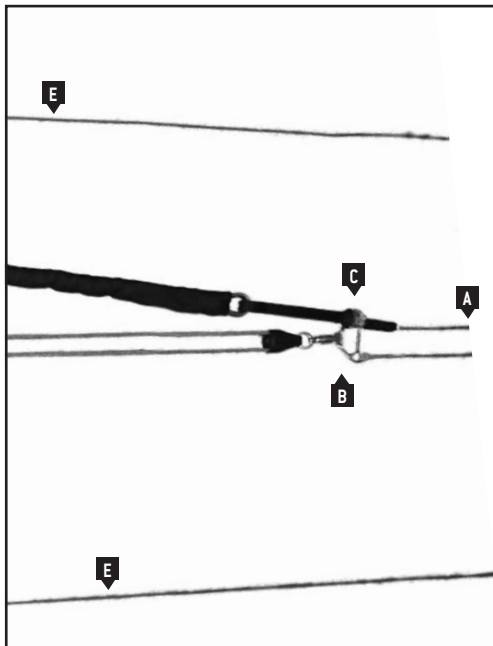

- A** Front line leaders.
- B** Front line swivel assembly.
- C** Front line leash attachment point and re-ride handle.
- E** Back line leader.
- G** Bar float.
- H** Bar.
- I** Kite leash.
- J** Adjustable bar stopper.
- K** Trim line.
- L** Trim cleat.
- M** Trim loop body.
- N** Push away trim loop release.
- O** Retractable bungee line holder.
- P** Trim line pull end.
- Q** Optional Trim line leash attachment point (advanced riders only)
- R** Lock in tube.
- S** Trim loop.

**CAUTION** Safety Warning: kite powered sports can be very dangerous and physically demanding. The user of this product should understand that participating in kite powered sports may involve serious injury or death and agrees to observe the following safety precautions:

- Get instruction specific to the type of kite power craft.
- Obtain first aid training and carry first aid and safety/rescue devices.
- Consult your physician prior to beginning kite powered sports training.
- Always wear a nationally approved personal flotation device when using a kite on water.
- Dress appropriately for weather conditions; cold water and/or cold weather can result in hypothermia.
- Check your equipment prior to each use for signs of wear or failure.
- Never kite alone.
- Do not kite in overpowered, gusty wind conditions.
- Do not kite in offshore wind conditions.
- Before launching from an unfamiliar site be aware of any dangers (rocks, reefs, currents, changeable weather, etc).
- Scout unfamiliar sites before launching. Never launch from an area with any obstacles closer than 2 line lengths downwind (people, rocks, etc).
- Do not kite near power lines!
- Do not ask a non-kiter to assist in the launching or landing of a kite.
- Always use the kite leash.
- Always prevent kites from inadvertently launching on land by weighting with sand, gravel, etc.
- Always announce when you are going to launch your kite so people can be prepared to move in the event of a gust or a problem.
- Disable an unattended kite by removing the lines, and then placing the kite leading edge down, facing the wind, and weighting with sand, gravel, etc.
- Do not exceed your kiting ability; be honest with yourself.
- You must not use alcohol or mind altering drugs prior to using this product.
- Do not modify or remove any release systems.
- Stop use immediately if your release systems are not functioning 100%.

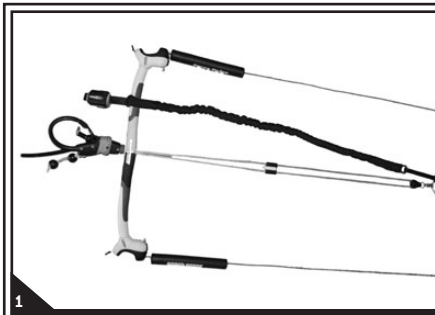

## TUNING THE LINES

It is very important that your lines are tuned properly. Make a habit of checking your line lengths regularly. Attach all four lines to an immovable object (nail or screwdriver pushed into the ground etc.) Pick up the Kite bar and make sure the center line is fully extended (un-cleat the rope, and let it pull through the cleat so the stopper knot is touching the cleat. **[1]**


Now pull on the bar to check your rear outside lines. If the bar is not square (perpendicular) to the center lines, then adjust the length using the knots on the leader line. **[2]**

Next check to see that your front lines are the same overall length as your back lines. Use the knots on the pigtail above the swivel to adjust. At this time also check that your front lines are equal length. To do this, let go of the bar and hold the swivel. Pull on the swivel until your front lines are tight and then slowly release your pull. As you release check the lines. If one is longer than the other it will bow down more than the other. Adjust using the pigtail knots above the swivel. **[3]**

All lines Equal Length!


With your center line fully extended (stopper knot touching the cleat) your back lines and front lines must be equal in length. If at any time, your rear lines are shorter than your front lines your kite will not fly properly. Lines stretch so please check them regularly! **[4]**

Back lines

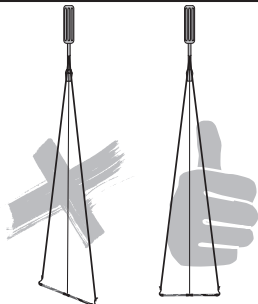


2

Front lines

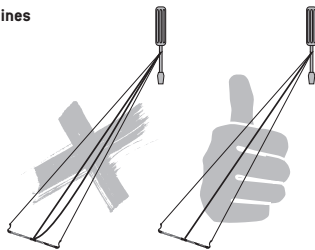

3

Overall all lines  
equal length





4

## BACK LINE LENGTH ADJUSTMENT

Your back flying lines can be adjusted longer or shorter by sliding the bar floats up and adjusting the larks heads knots. **(1)**

Move the larks head connection up or down to correct uneven back line lengths. **(2)**

When your line lengths are equal, slide the bar floats down covering the loose ends of the back leader lines. **(3)**

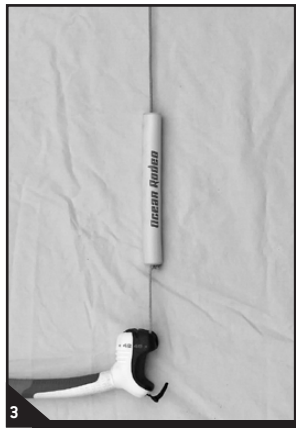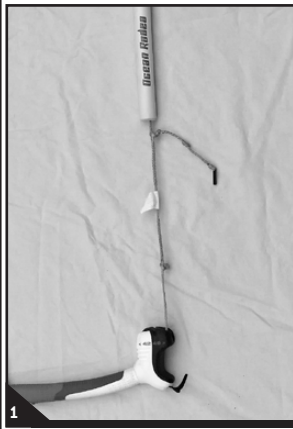

## FRONT LINE LENGTH ADJUSTMENT

Locate your front line swivel assembly. You will notice one of the front lines is attached to a leader line featuring several adjustment knots.

Undo the larks head knot and move the flying line up or down to lengthen or shorten the front flying line.



## KITE LEASH ATTACHMENT


The SLE Bar 3.0 has two different safety modes. The **Centre Line Depower mode** and the **Front Line Re-ride mode**.

For maximum depower in an emergency we recommend always attaching your kite leash to the front line re-ride handle.

### FRONT LINE RE-RIDE MODE

#### Recommended Safety mode.

Attach the carabiner through the loop in the webbing handle located at the front line swivel assembly. **[1]** Kite leash attached to front line re-ride handle ready to ride. **[2]**

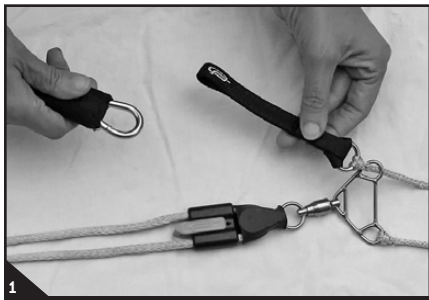

## KITE LEASH ATTACHMENT TO TRIM LINE

### WARNING!

For advanced riders only who understand that releasing the kite in this setting will not deliver the maximum possible depower.

Locate small stainless steel ring on the end of the trim line. **[1]**

Attach kite leash carabiner to the stainless ring at the bottom of the chicken loop hub. **[2]**



## ATTACHING THE KITE LEASH TO YOUR HARNESS

### IMPORTANT!

The kite leash release cuff must always be located at your body and within easy reach! Never attach the release cuff on the bar end as the release cuff will be out of reach in an emergency!

### WARNING!

Always attach the release cuff to the front of your harness spreader bar with a strong secure connection. Some harnesses come with a handle pass line located at the back of the harness. This back attachment is designed for high level riders performing advanced tricks. A back mounted kite leash may come under substantial load

during a emergency kite release, which may rotate you facing away from the kite and make it difficult to reach the release cuff on the kite safety leash.

### ATTACHING THE KITE LEASH TO YOUR HARNESS

Located secure attachment point on harness spreader bar. [1]

Thread the webbing release tab through the stainless ring mounted on you harness spreader bar. [2][3]



### KITE LEASH RELEASE CUFF ACTIVATION


To activate the kite leash release cuff, firmly grasp the release cuff and push away. **(4)(5)(6)**

**Warning:** By releasing your kite leash your kite is now out of your control and a potential hazard to others. A loose kite can cause serious injury or death to others.

### KITE SAFETY LEASH RELEASE CUFF TENSION

The Velcro release cuff can be wrapped tighter or looser if required.


Test your release cuff tension before launching your kite. Too loose and the releases might release accidentally. Too tight and they may require too much force to release. **(1)**

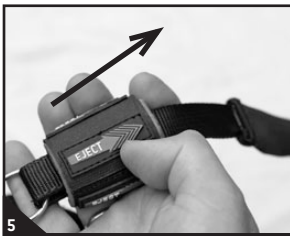

## TRIM LOOP RELEASE CUFF ACTIVATION

To separate yourself from the trim loop in an emergency situation, push the red release cuff located on the chicken loop hub away from you with force. **(1)(2)(3)(4)(5)**

Providing your kite leash is attached to the front line re-ride handle, the bar will slide up along a single front line, providing maximum possible depower.

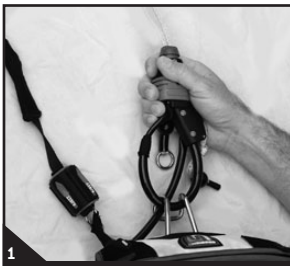


## TRIM LOOP RESET AFTER ACTIVATION

Flex the trim loop tubing around so the looped end will thread over the webbing release tab. **[1][2]**

Push the red release cuff up and squeeze the webbing release tab up against the body of the chicken loop hub. **[2][3]**

The red release cuff is fitted with elastic shock cord that will snap the release cuff back into riding position.


Make sure the red release cuff is sitting flush against the black Trim Loop hub before riding. **[4]**

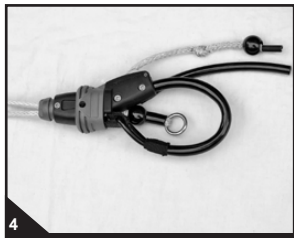

## USING A LOCK IN TUBE

The lock in tube helps keep your trim loop hooked in if you have slack or minimal tension on your lines while riding.


To use the lock in tube simply flex the tubing into the head of the harness, under the trim loop.

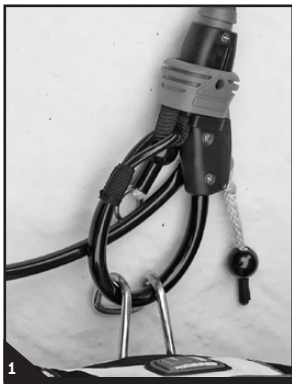

## TRIM LINE ADJUSTMENT

To change the trim or pitch of your kite, un-cleat the trim line and pull toward you for more depower. Do the opposite to achieve more power. **[1]**

To secure trim line ensure the line is pressed firmly into cleat. **[2]**

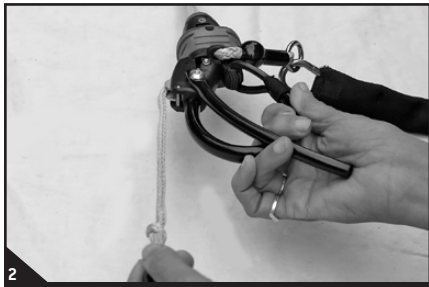

## ADJUSTABLE TENSION BAR STOPPER

The adjustable tension bar stopper allows the rider to set the bar throw to a preferred position and sliding tension.

### POSITIONING THE BAR STOPPER

Manually slide the bar stopper up and down the trim line to find a comfortable setting. By positioning the bar stopper higher up the trim line you will have more available depower while riding.

### WARNING!


**a bar stopper that is positioned low on the center line will restrict the depower potential of the kite.**

### SETTING THE TENSION OF THE BAR STOPPER

By moving the red clip up and down over the black slider you can adjust the sliding tension from easy to hard.

We recommend always having the bar stopper set at easy sliding position. **[1]**

For beginners or higher wind conditions we recommend the bar stopper being pushed all the way to the pulley. This setting allows full trim depower if you let go of the bar. **[2]**

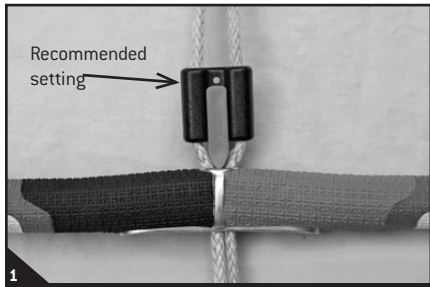


**WARNING!**

Some advanced riders prefer the bar stopper to be locked in place. However if you let go of the kite bar the kite will stay powered. (3)


**WARNING!**

If you ride without the red clip, your bar stopper will not slide when the bar makes contact. During a hard fall it is preferable to have your bar stopper slide up as it will depower the kite. (4)

Always use the red clip on your bar stopper.

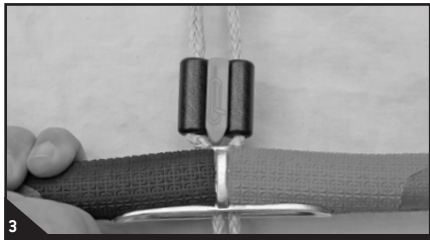

To adjust red clip flex apart and slide up or down black bar stopper. (5)

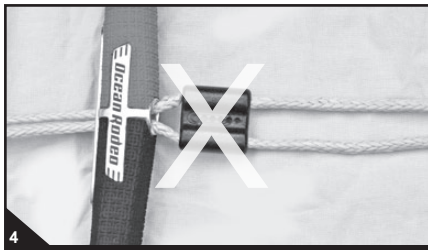


## ADJUST BAR LENGTH

Your SLE 3.0 bar can be easily adjusted to work in two lengths.

To shorten or lengthen the bar length undo the bar end leader line  
**(1)(2)(3)**

Pull bar end leader through to opposite side and re attach flying lines.  
Repeat on opposite bar end.  
**(4)(5)**

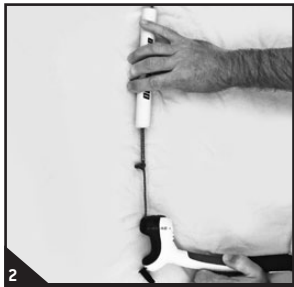

## LINE STORAGE BUNGES

Use bar end line bunges to secure your kite lines for tangle free storage.



## STORING AND CARING

It is important when storing the bar and lines to wind the lines in a figure 8 pattern over the bar ends. This will prevent them from twisting.

### **WARNING!**

**Take care to avoid having knots in your lines. Knots can damage the lines and cause them to snap. Lines with knots should be replaced immediately.**

## WARRANTY

All kite control bars are covered by a one-year warranty offered to the original purchaser on workmanship and materials. Warranty is limited to the repair or replacement of the Ocean Rodeo product at our option. This warranty does not cover damage caused by normal wear and tear, misuse or negligence.

This warranty is invalid if unauthorized repairs or modifications have been carried out. Bars used for professional or commercial use (rentals, instruction, etc) are covered under warranty for 30 days. Repairs or alterations not covered by warranty will be billed to the customer.



## THE CREW IS FOR YOU!

The Ocean Rodeo Crew is a more than just an owners group. It is a dedicated following of riders united by a common love for the environment they ride in and the equipment they use.

- Register your product online
- Check for product updates and notifications
- Receive newsletters and press releases
- Participate in the crew forum, photo/video gallery
- Log your riding sessions
- Earn crew points with online purchases

**Join the Crew and participate in the broader community of dedicated Ocean Rodeo riders!**

**[WWW.OCEANRODEO.COM/CREWSITE](http://WWW.OCEANRODEO.COM/CREWSITE)**

**Ocean Rodeo Sports Inc.**

41 Cadillac Avenue • Victoria, BC • V8T 1Z3 • CANADA  
phone: 250 383 4969 • skype: oceanrodeo  
info@oceanrodeo.com • www.oceanrodeo.com